 
 







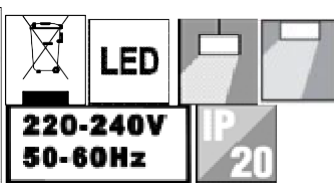


Lateral Monteringsanvisningar



• Monteringsanvisningar • Directions for use

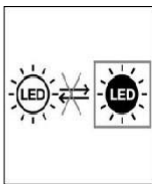




Lateral [mm]	A	B	C	X	Y	R
Lateral 600	600	100	67	100	50	540
Lateral 1195	1195	100	67	100	50	1100
Lateral 1486	1486	100	67	100	50	1100

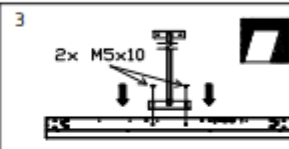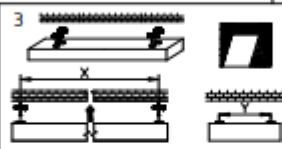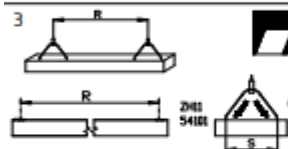      


ASTA M,L

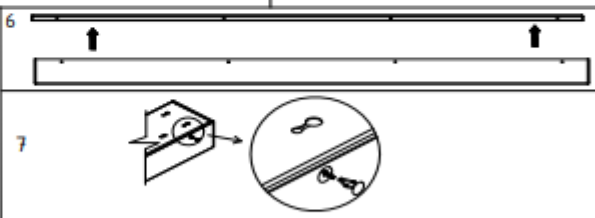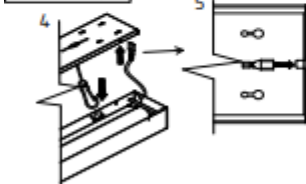  

ASTA S

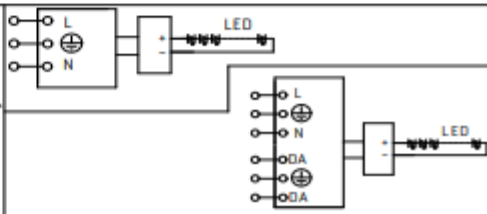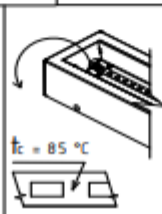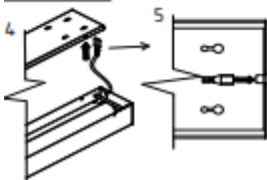   

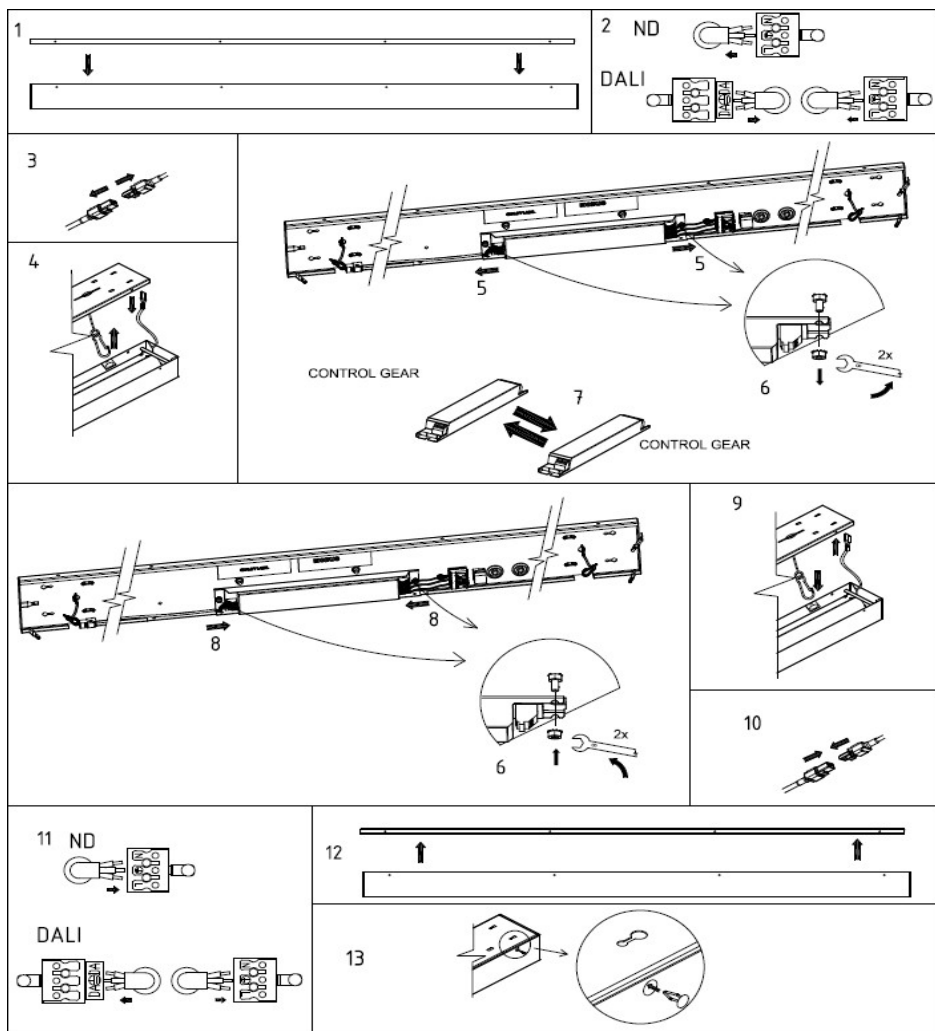 

Replacing control gear