




Linea Recessed

- Monteringsanvisningar use • Directions for use

	A mm	B mm	C mm
Linea S Recessed	596	67	45
Linea M Recessed	1196	67	45
Linea L Recessed	1437	67	45
Linea XL Recessed	2337	67	45

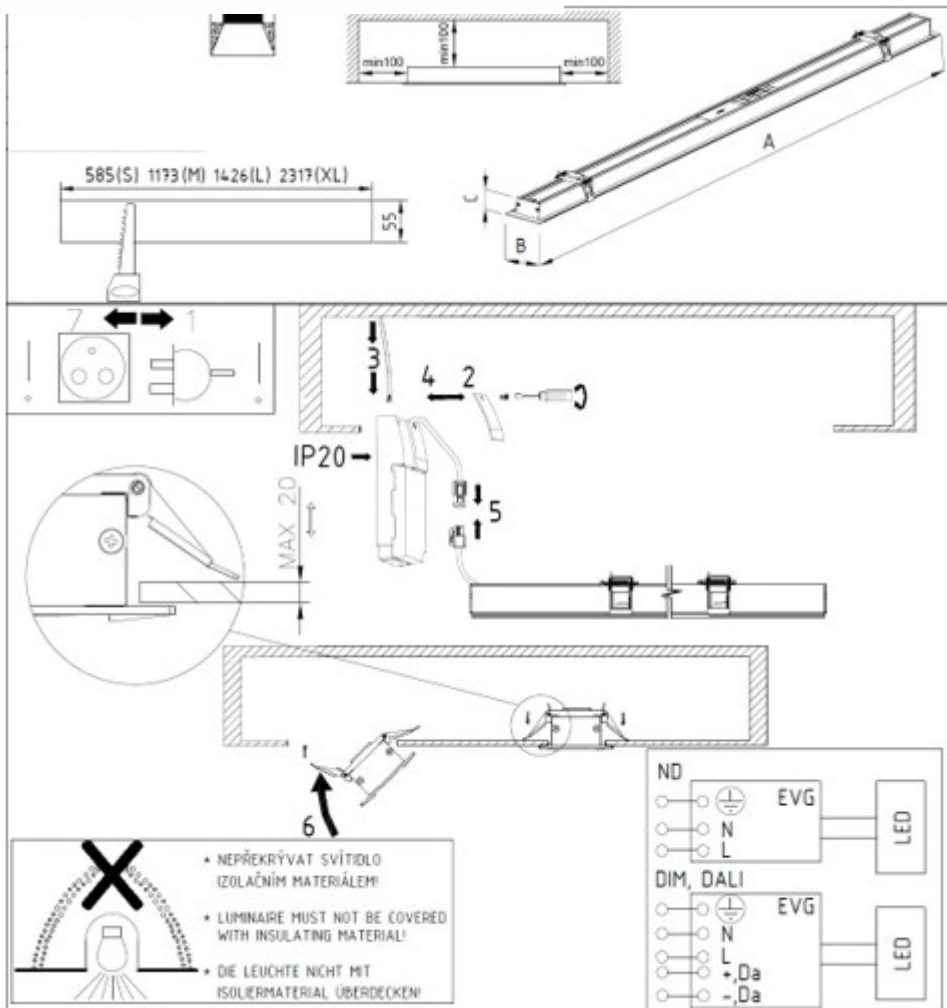

Replacing control gear

